


## Application Instructions for DeLuxe Innovations Waterslide Decals by Microscale Swift Tractor Cab - Volvo and others - N Scale Item #991901

1. The model to be decaled must have a clean relatively smooth glossy surface
2. Cut out decal and dip in clean water for 10 seconds. Set decal on a damp paper towel for a full 60 seconds or until decal slides freely on the backing paper
3. Position decal where desired on truck cab by gently sliding it off the backing paper with a small damp paint brush
4. Blot gently with paper towel or soft cloth to remove excess water & allow to dry completely
5. When placing decals on slightly irregular surfaces use Microscale Micro Set or Walthers Solvaset to help soften the decal and improve adhesion by eliminating tiny bubbles under the film
6. When decals are completely dry, at least 1 hour or more, wipe down the object with a damp paper towel or damp soft cloth to remove any decal adhesive
7. Apply a clear protective coating over entire surface. Here are a few examples:
  - Microscale – Micro Gloss, Micro Flat and Micro Satin for use on plastic surfaces
  - Floquil Polly S – Polly Scale Clear Finish -- Satin or Gloss
  - Testors – Dullcoat or Glosscoat
  - Model Master – Lacquer Overcoat in Lusterless (flat), Semi-Gloss or Gloss

Our N scale Swift Decal set is designed for Kato's Volvo tractor model in white. It includes enough to do 4 complete cabs. There are also "number sets" so you can make up your own road numbers. There is a road number on the back of the cab in addition to the ones shown on the side. Rear locations vary but centered at the level of the top of the side windows is common. The blue stripes are for modeling older tractors, such as the Con-Cor and Herpa models. Refer to prototype photos for placement.

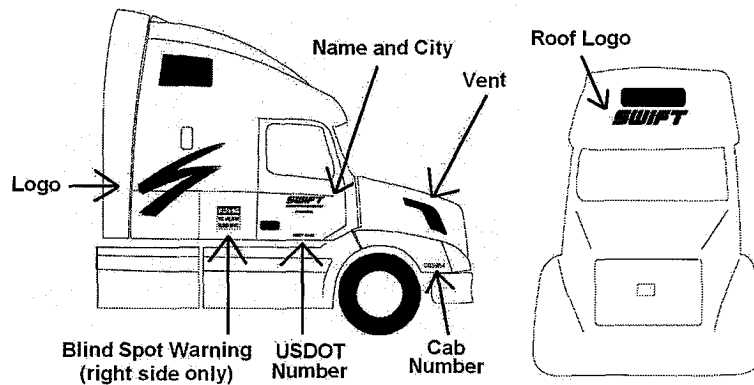

DeLuxe Innovations  
140 Greenwood Ave. Suite 2A  
Midland Park, NJ 07432 USA  
(201) 857-5880  
[www.deluxetrains.com](http://www.deluxetrains.com)